


To add or change one of your granular materials, power the unit up. Once the "mode" screen is displayed, touch the yellow system button. Using the spinner controls to change the digits, and the blast/pass controls to change cursor positions. Run the cursor past the end to enter setup mode. Using the spinner switch, select "Materials."

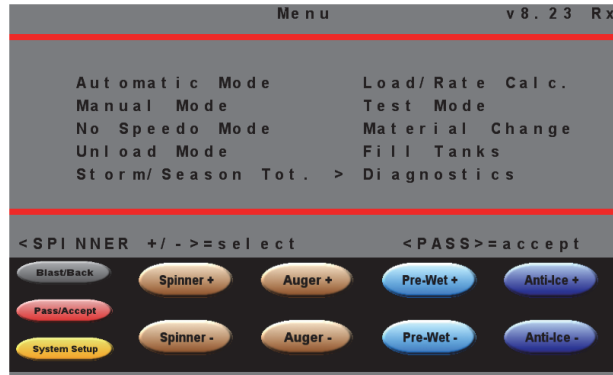

Configuration	
Enter Password:	
[*000]	
<SPINNER +/-> to change	
<BLAST>=back	<PASS>=next/done

Configuration	
Setup Wizard	Advanced
System Setup	Set Clock
Trim/Cal	Reset All
+ Materials	Save and Exit
<BLAST>=done	<SPIN+/->=sel <PASS>=next

Move the cursor to an un-named slot (i.e. #2 in this example) and push pass. Change or assign a name to your selection and set all operating parameters of the selection.

Material Setup	
→ Granular	
Prewet	
Anti-Ice	
<BLAST>=done	<SPIN+/->=sel <PASS>=next

Setup	
→ 1) SALT	6)
2)	7)
3)	8)
4)	9)
5)	10)
<BLAST>=done	<SPIN+/->=sel <PASS>=next

Granular Material (page 1/2)	
→ Name: [SALT ]	
Min. Rate: 0/MILE	
Max. Rate: 900/MILE	
Blast Rate: 1200/MILE	
Prescription: OFF	
<SPIN+/->=sel <ICE+/->=adj <BLAST>=done	

Granular Material page 1/2	
Name: [SALT 300]	
Min. Rate: 300 LBS/MILE	
Max. Rate: 300 LBS/MILE	
→ Blast Rate: 1200 LBS/MILE	
Prescription: OFF	
<SPIN+/->=sel <ICE+/->=adj <BLAST>=done	




7165 Boone Avenue North, Suite 190  
 Brooklyn, Park, MN 55428  
 763.493.9380 telephone 763.493.9340 fax  
 www.ciruscontrols.com

# SpreadSmart Rx Touch™ User's Guide

Touch to access Menu

Touch for blast/pass

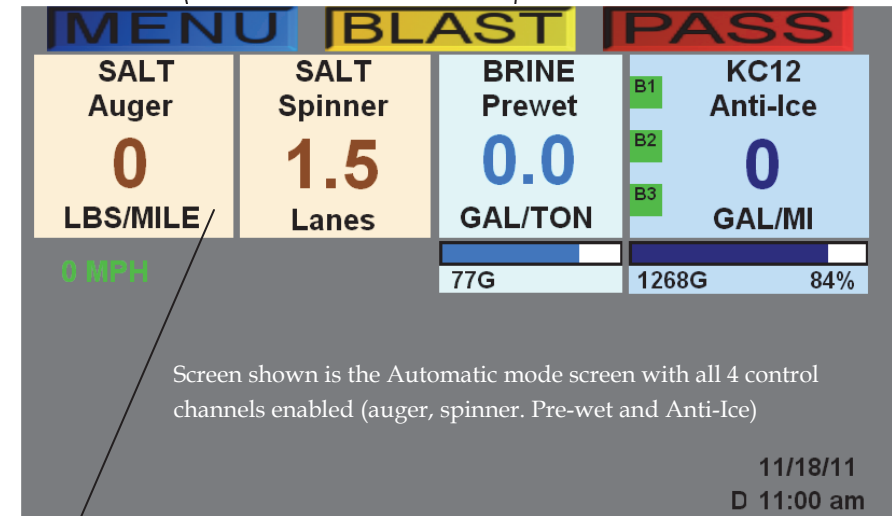

Screen shown is the Automatic mode screen with all 4 control channels enabled (auger, spinner, Pre-wet and Anti-Ice)


Touch function box (auger, spinner, etc) to make adjustments to rate settings.

Touch "Date/Time" for Day / Nite display mode

SpreadSmart Rx touch Screen commands mirror the commands that are found with a keypad operated system.



Start the truck (turns on power) to reach the Menu screen

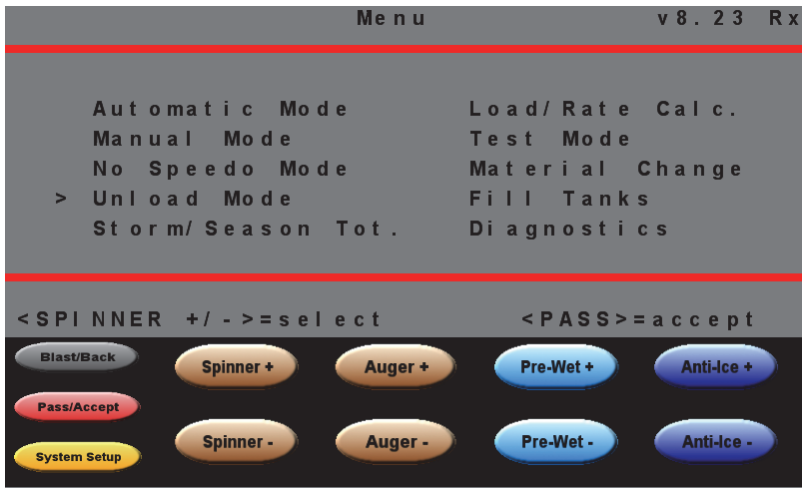


Use the spinner +/- to move the arrow to the mode you choose.

Use the "pass" button to select the option that the arrow points to.


Use the "blast" button to back up to the last menu.

Follow the instructions under the red line to indicate which buttons to use to navigate each menu.

To access Unload operating screen, select Unload and use the controls on that screen to unload the truck while standing still.

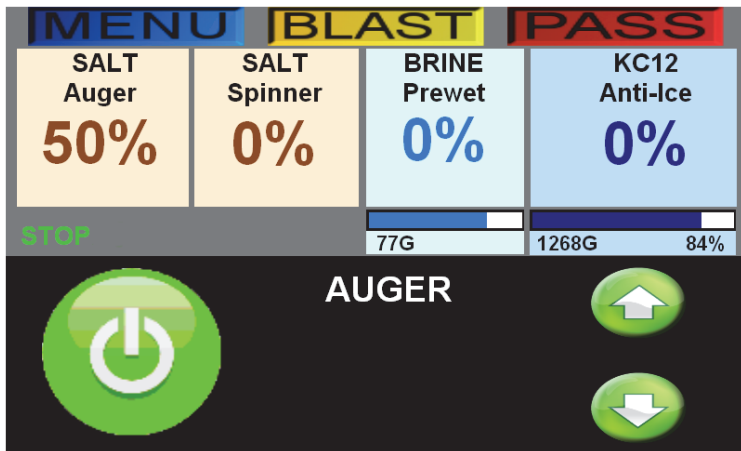

From the Menu screen, select Diagnostics for Help and all other diagnostics screens

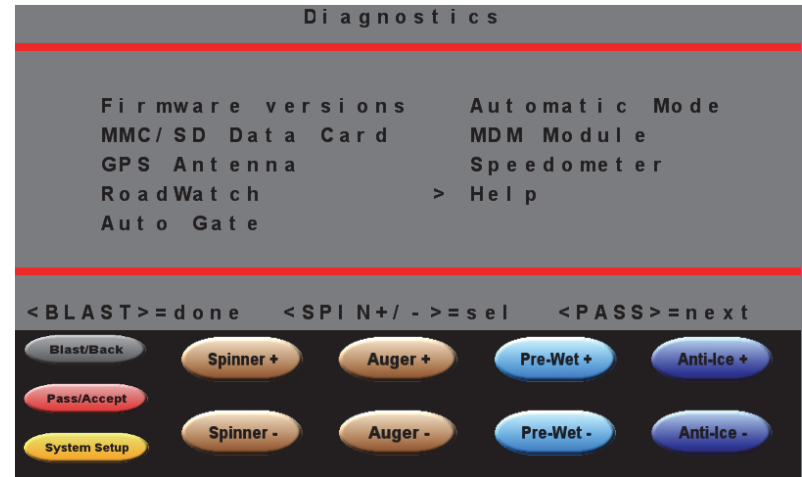

Choose Help to read detailed instructions on each operating Mode of SpreadSmart Rx

