
PLUMBING INSTRUCTIONS:

- 1. PLUMB "T" PORT INTO TANK PORT ON POWER BEYOND.
- 2. PLUMB "P" PORT INTO PRESSURE PORT ON POWER BEYOND.
- 3. "B IN" PORT FROM VALVE SECTION. "B OUT" PORT TO THE LIFTING SIDE OF CYLINDER.
- 4. "A IN" PORT FROM VALVE SECTION. "A OUT" PORT TO THE LOWERING SIDE OF CYLINDER.
- 5. TEE "LS" PORT INTO THE LOAD SENSE LINE OF THE SYSTEM. DO NOT USE A SHUTTLE IN THE LINE.

WIRING INSTRUCTIONS:

- 1. WIRE MK-2005 DIRECTLY TO MAKO II UNIT AND PLUG INTO THE DA FLOAT PLUG. THEN USE MAKO TRIM TO TURN ON / OFF FLOAT THROUGH JOYSTICK MOVEMENTS.
- WIRE TO A SINGLE ON/OFF SWITCH. WHEN POWER IS ON THE MANIFOLD WILL HOLD THE SET LIFT PRESSURE. WHEN POWER IS OFF THE MAIN SECTION WILL CONTROL CYLINDER PRESSURES.

WIRING

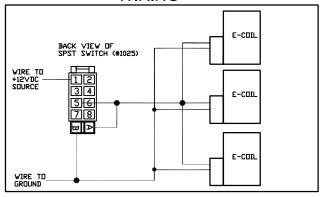


ORDERABLE WIRING ACCESORIES:

1. SPRAGUE ON/OFF SWITCH (PN 1025). (QTY 1)


TESTING THE BLOCKS PLUMBING:


- 1. TURN ON THE BLOCKS COILS.
- 2. TURN RELIEF IN UNTIL PLOW RAISES AND THEN BACK OUT AND PLOW SHOULD LOWER.

9	CV04-20-0-N-4	1	CHECK VALVE	12-14 ft lbs	SK04-2N-T
В	HV10286-070	4	EXPANDER PLUG, 7 MM	NA.	NA
7	4303512	1	12 VDC E-COIL, -10, METRIPACK	5 FT LBS	NA
6	4303412	1	12 VDC E-COIL -08 MPACK 150	5 FT LBS	NA
5	FR10-20A-0-N-2.5	1	REGULATOR VALVE	25 FT-LBS	2K10-5N-M
4	PR10-36A-0-N-15	1	REDUCING/RELIEVING VALVE	25 FT-LBS	SK10-3N-BM
3	SV08-20-0-N-00	1	2/2 SOLENOOD VALVE	20 FT-LBS	SK08-2N-T
5	SV10-41-0-N-00	1	SOLENOID VALVE	25-FT-LBS	SK10-4N-HMM
i	060702M-B	1	MANIFOLD BLOCK	NA	NA
ITEM NO.	PART NUMBER	QTY.	DESCRIPTION	Torque	Sealkit

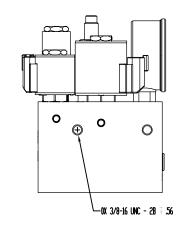


(8)

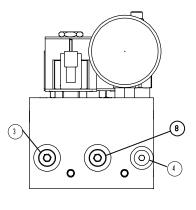

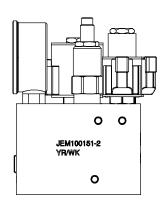

NOTES:

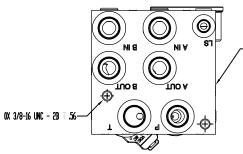

-HYD100025 / JEM100151-2

CIRUS
CONTROLS LLC

Phone: (763) 493-9380 Fax: (763) 493-9340

7165 BOONE AVE. N. SUITE 190 BROOKLYN PARK, MN 55428

HYD130025 / JEM100151-2

THIS DRAWING IS THE PROPERTY OF CIRUS CONTROLS.
THIS IS TO BE CONSIDERED CONFIDENTIAL AND
PROPRIETARY NO REPRODUCTION IN WHOLE OR PART
WITH OUT PERMISSION IS ALLOWED.