

TECH NOTE: 09-001

TITLE: Firmware for Pre-Wet (Gal/Mile)

DATE: 02/2/09

REVISION: 1.0

Description: this update refers to updates to *SpreadSmart Rx* TM operating firmware. This change allows the operator to choose operation of the Pre-Wet controller in the typical mode (gallons/ton of granular material dispensed) or in the new mode (gallons per mile traveled).

Implement this upgrade: upgrade the operating firmware of the *SpreadSmart Rx* TM in the vehicle from the existing firmware to version 4.18 (for LCD) or 6.18 (for VFD) by following the firmware update procedure (attached).

Enable the new Feature: verify that you are operating the correct version of firmware. Version # shows on the splash screen, the menu screen and in the diagnostics screen.

1) Power up the unit. When the "menu/mode" screen is displayed, simultaneously hold the auger and pre-wet switches down to enter the "configuration screen." You will be asked for a password, enter <u>current password</u> using the spinner controls to change the digits, and the blast/pass controls to change cursor positions. Run the cursor past the end of the password to enter configuration mode.

Configuration		
Enter Password:		
[*000]		
<spinner +="" −=""> to change</spinner>		
<pre><blast>=back</blast></pre>	<pass>=next/done</pass>	

Configuration		
Setup Wizard System Setup → Trim/Cal Materials	Advanced Set Clock Reset All Save and Exit	
KBLAST>=done KSPIN+	·/->=sel ⟨PASS>=next	

Choose Trim/Cal, Pre-Wet and scroll to "pre-wet units" which is default at gal/ton.

Trims/Calibration		
Auger Spinner → Prewet Anti-Ice	Spe∈ MDM	do Module
<blast>=done</blast>	⟨SPIN+/->=sel	<pass>=next</pass>



Use the Anti-Ice paddle to toggle selection to Gallons/Mile. Use the blast key to return to the menu screen and select automatic to operate pre-wet in gallons/mile. Use toggle to set flow rate.



